 
 
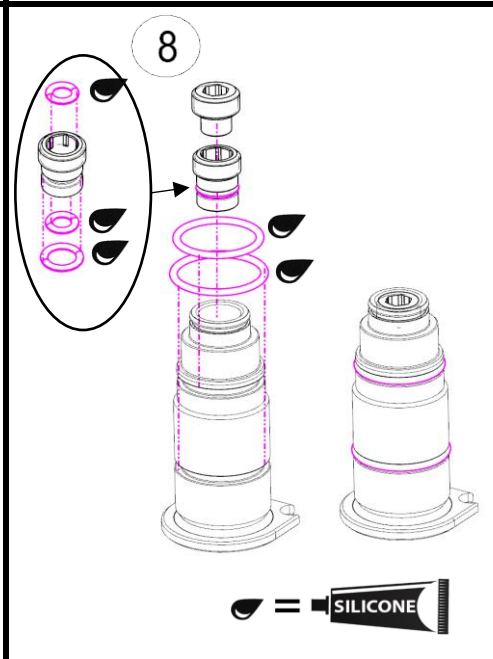 
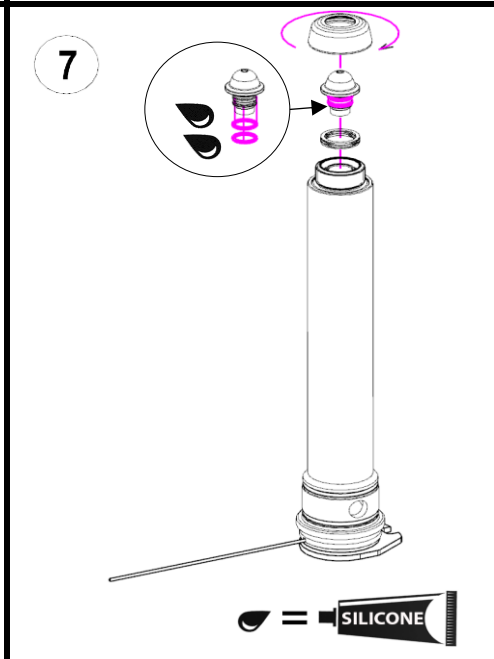 
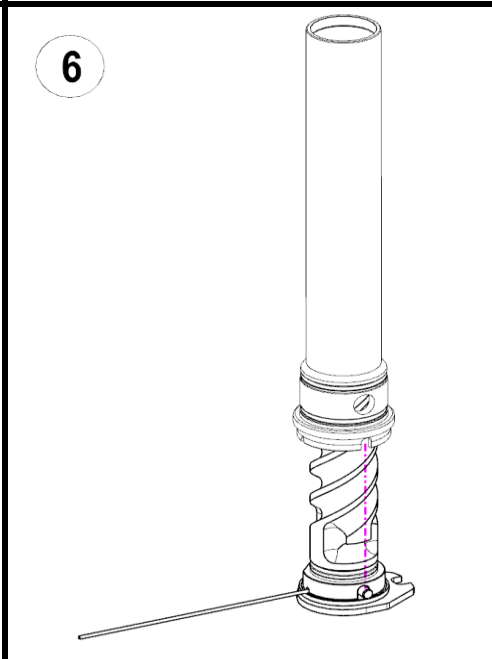 
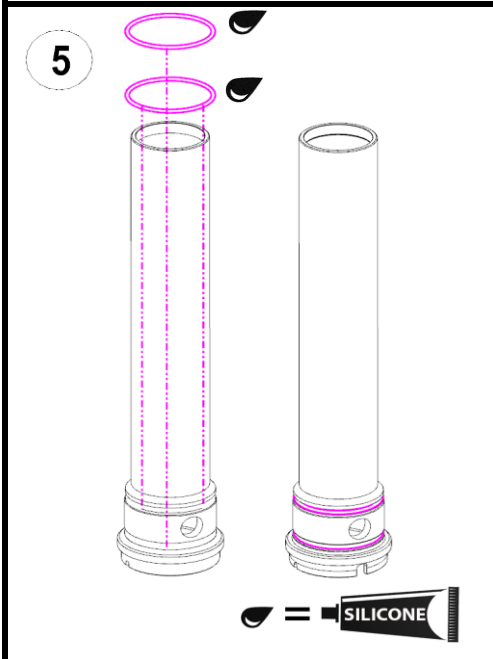 
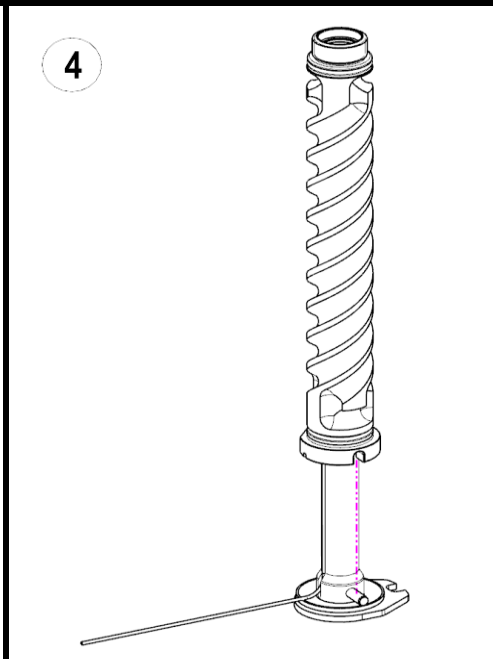 
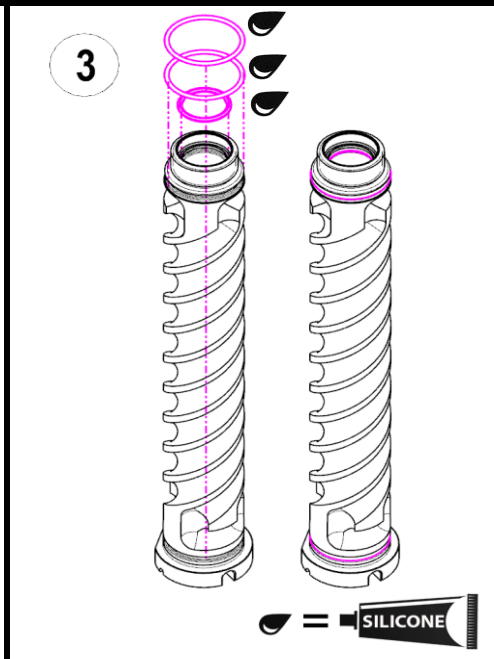 


LSR Manifold System Visual Assembly Instructions.

 
Refer to www.husky.co/manuals for complete assembly manuals.

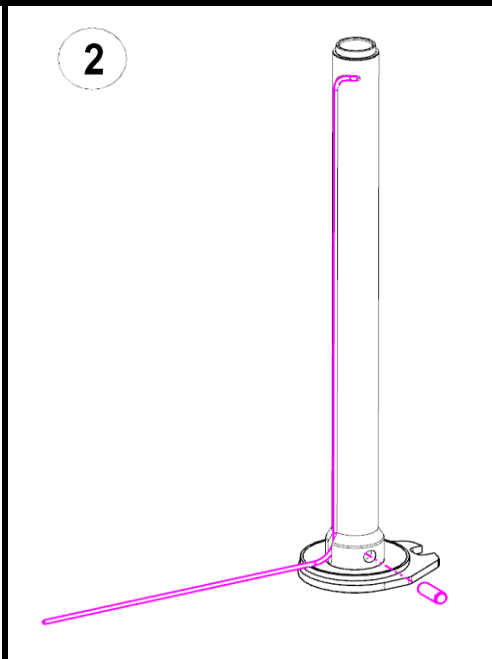

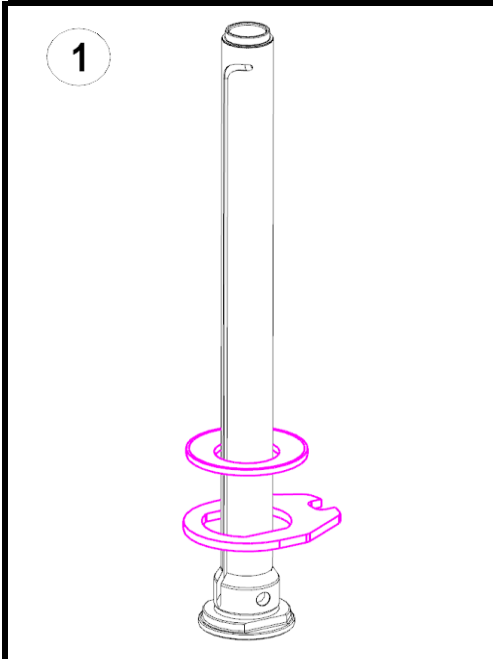


9


2X ONLY

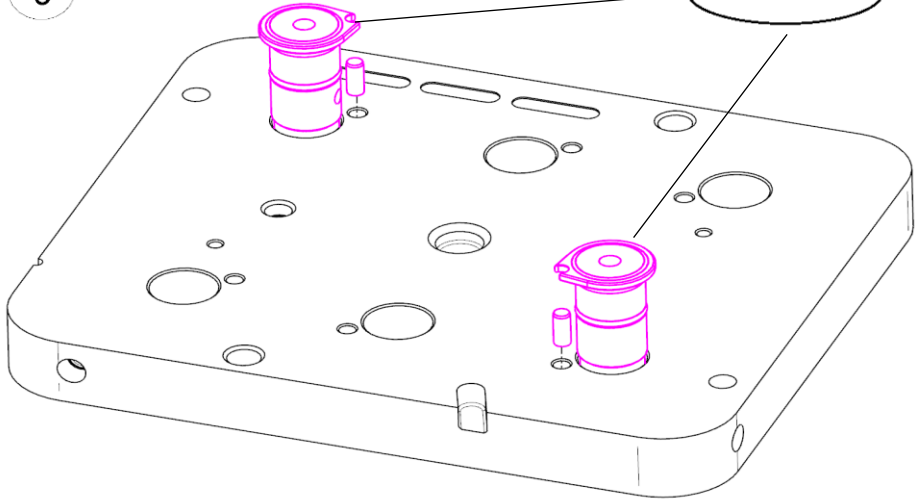


10

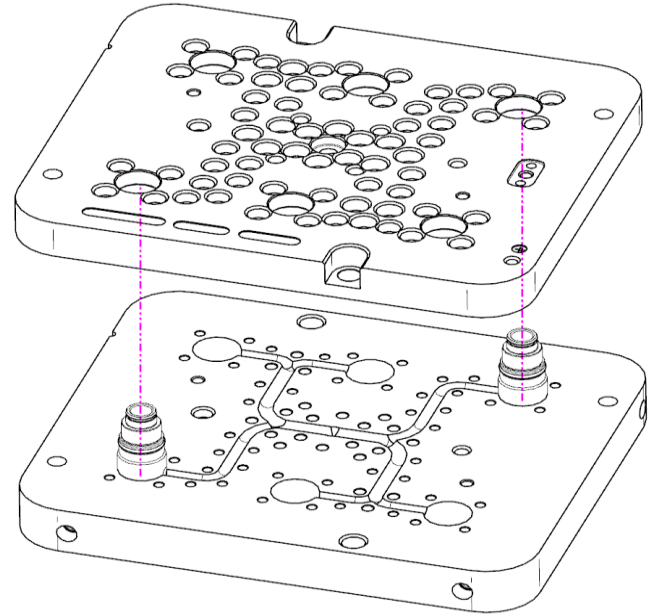 


11

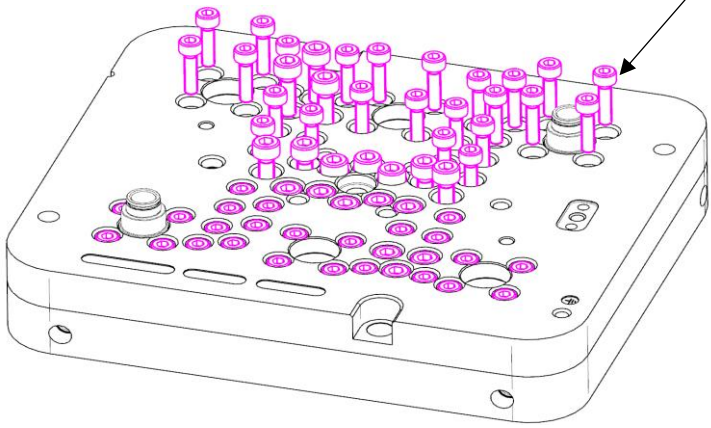 


12

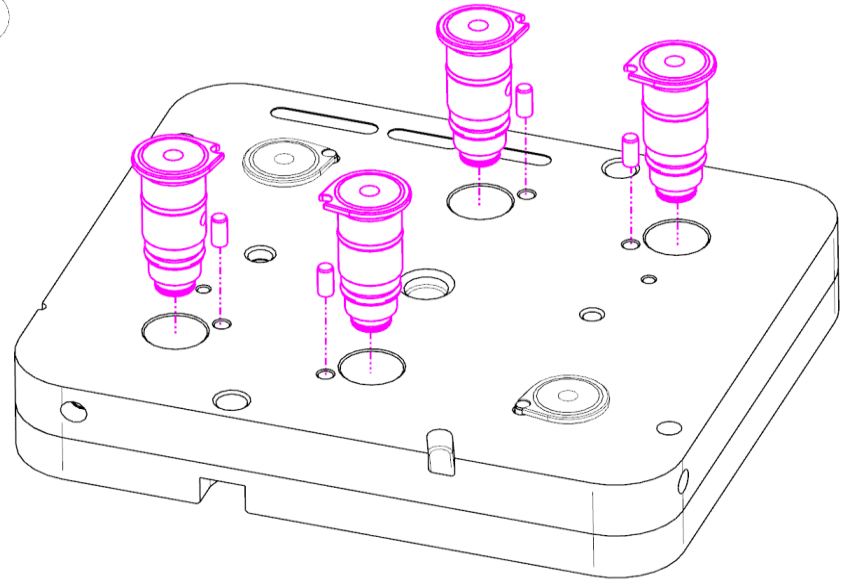 


13

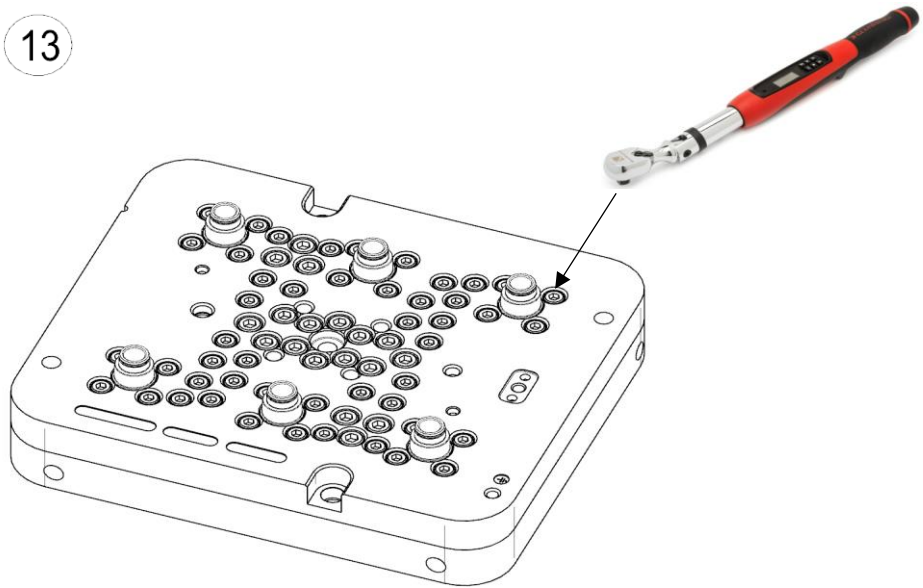 


14

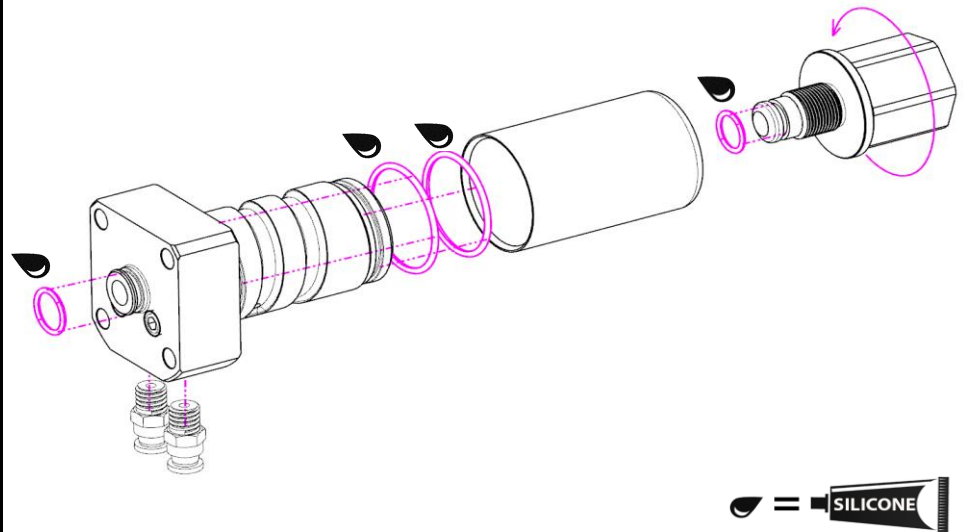 


15

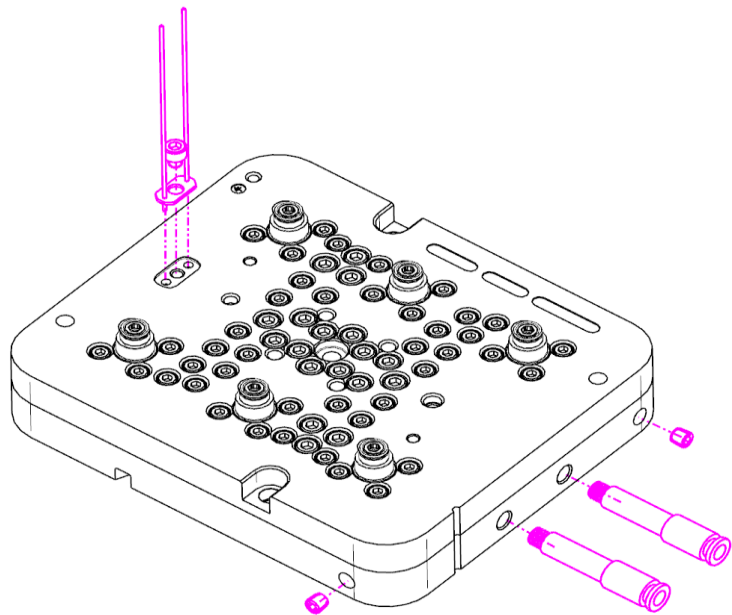 


16

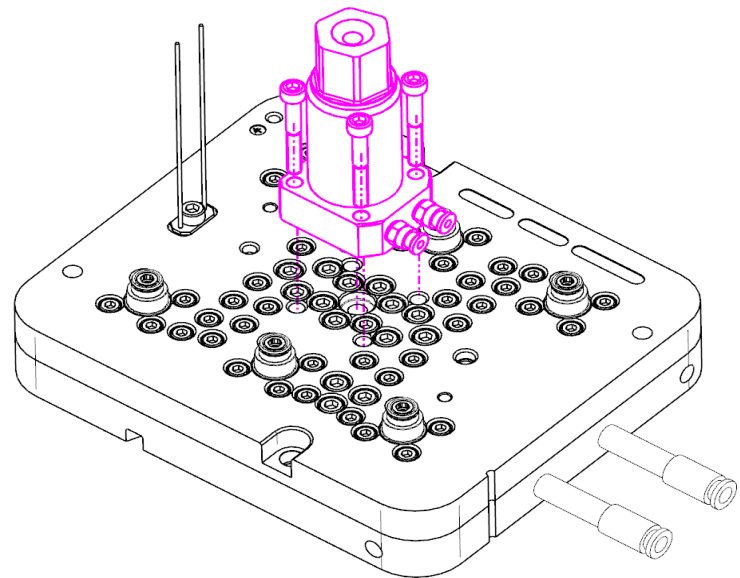 


17

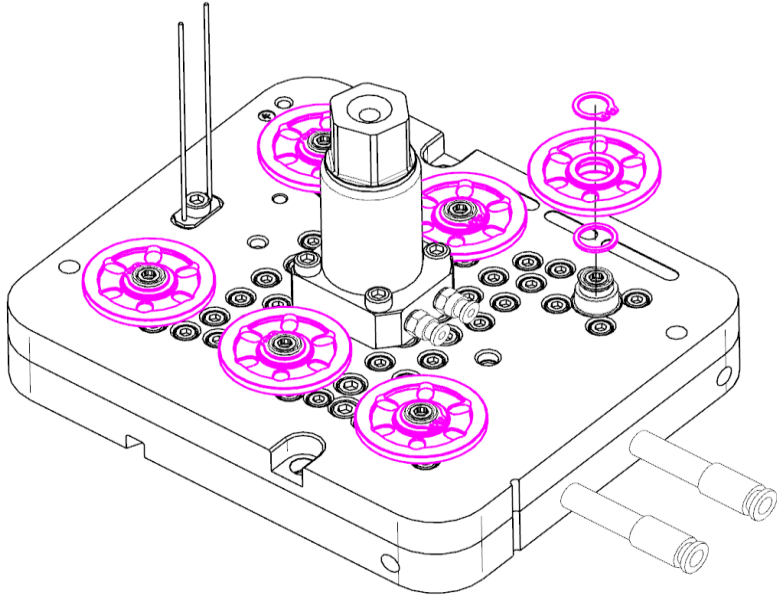 


18

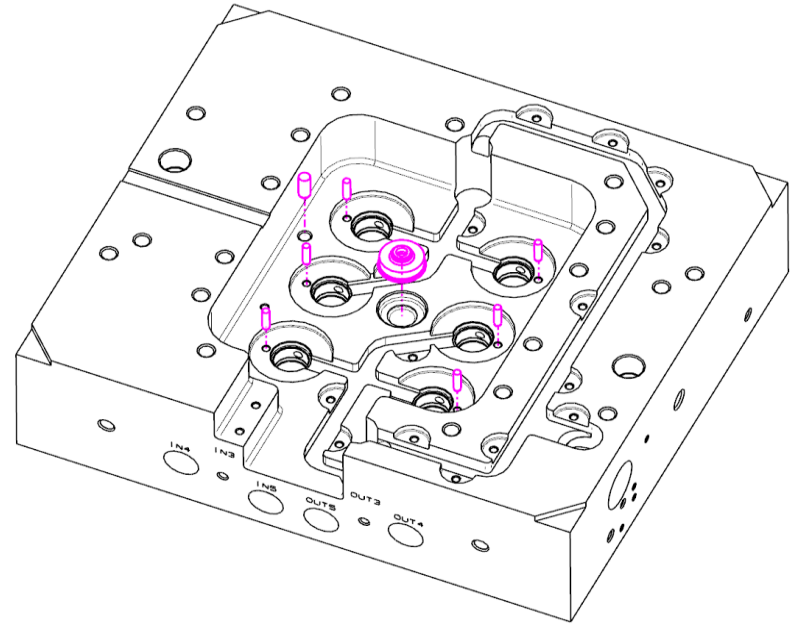 


19

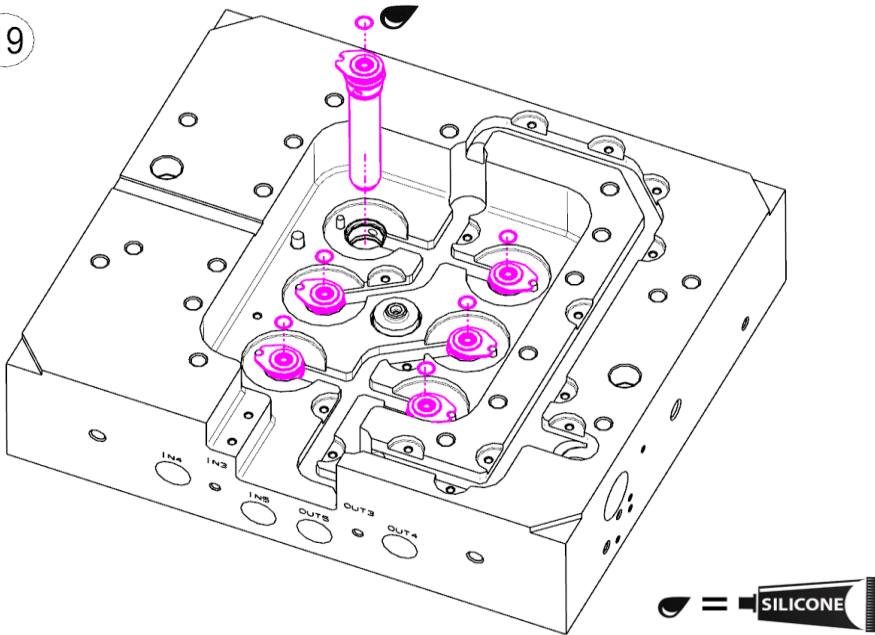 


20

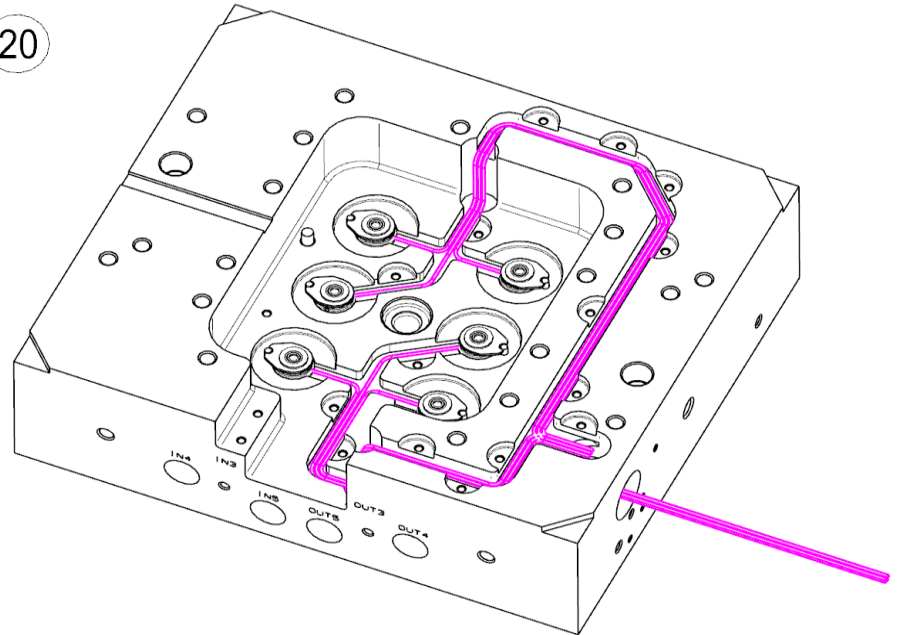 


21

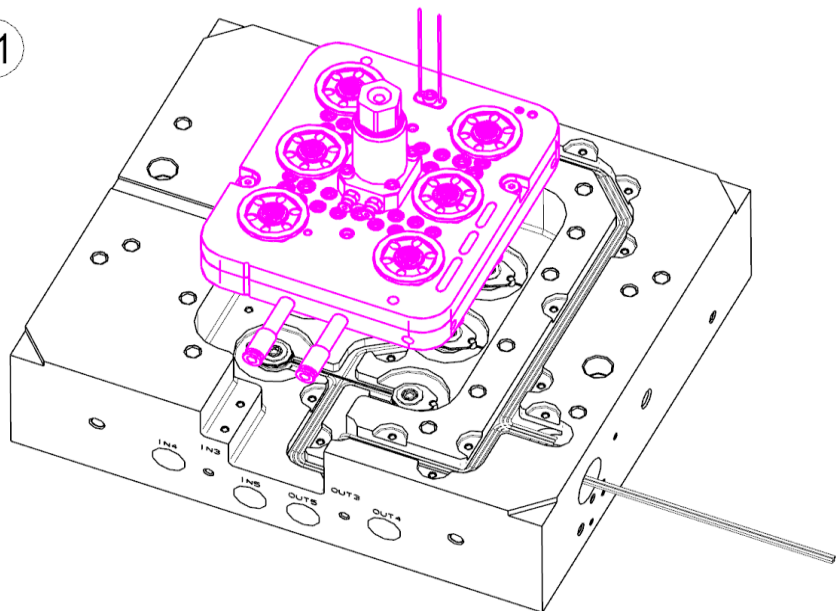 


22

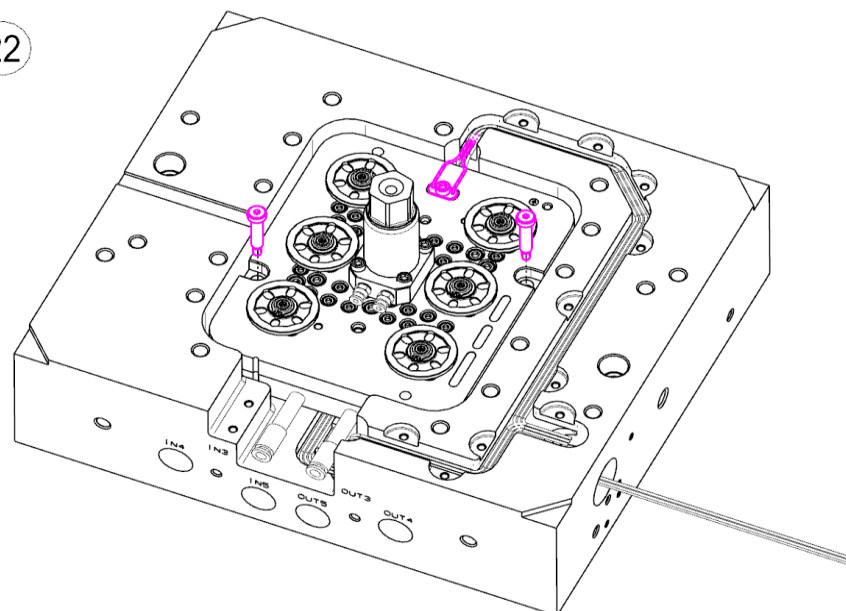 


23

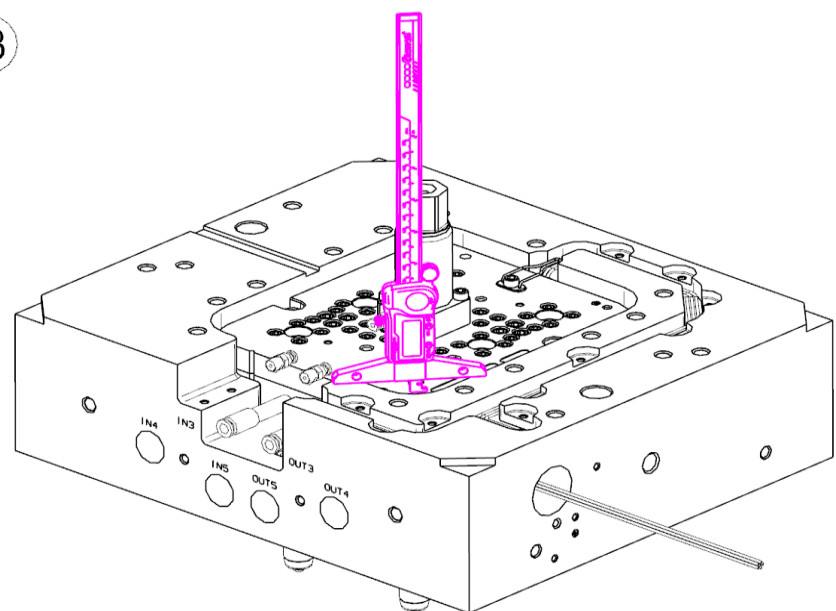 


24

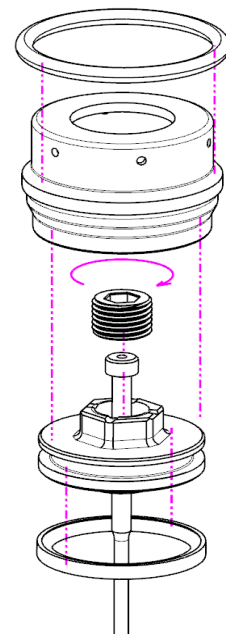 


25

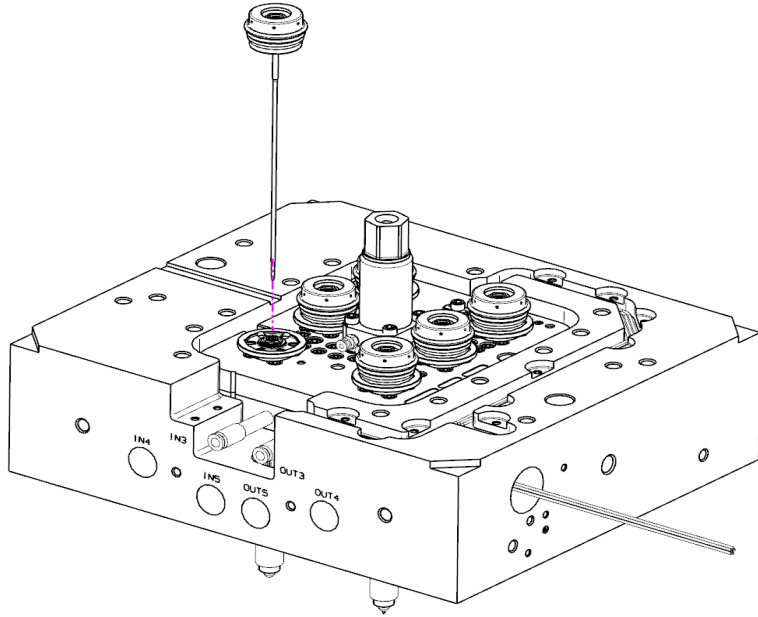 


26

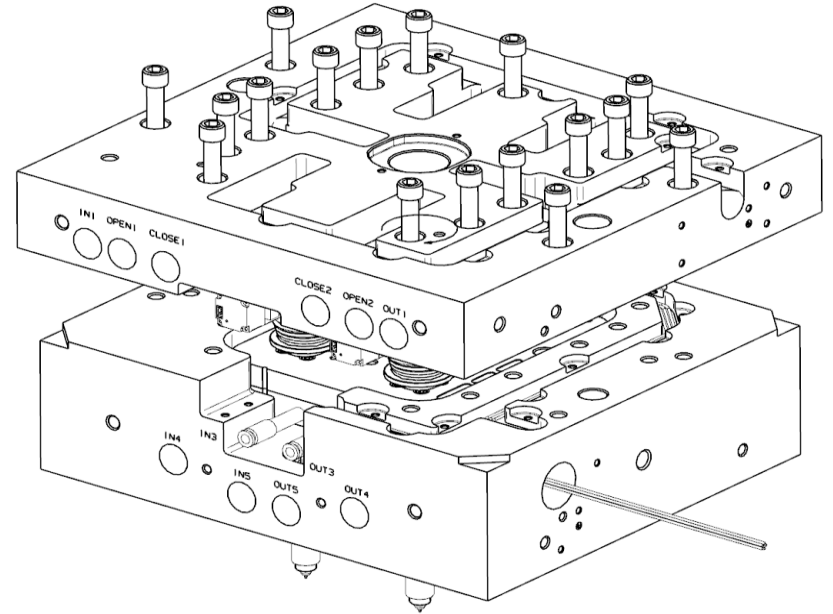 


27

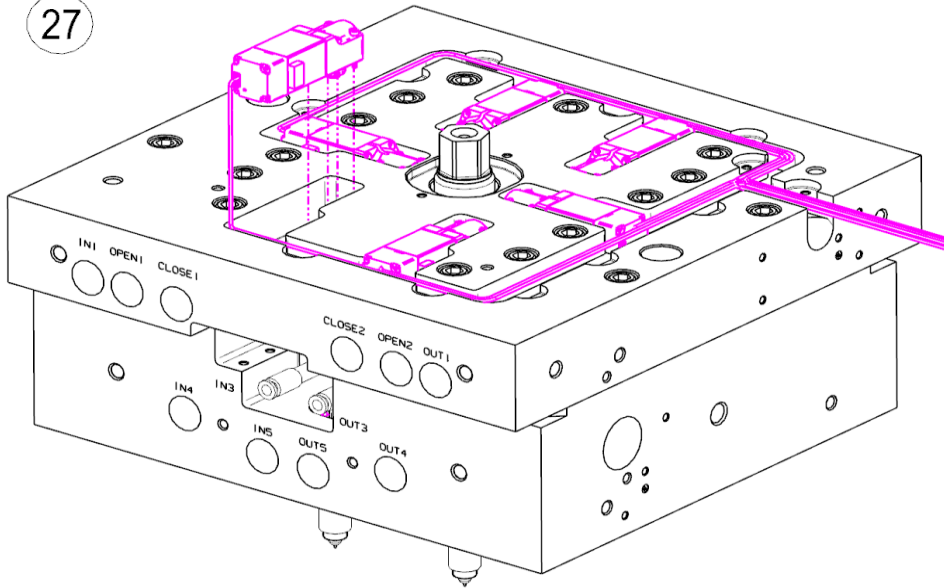 


28

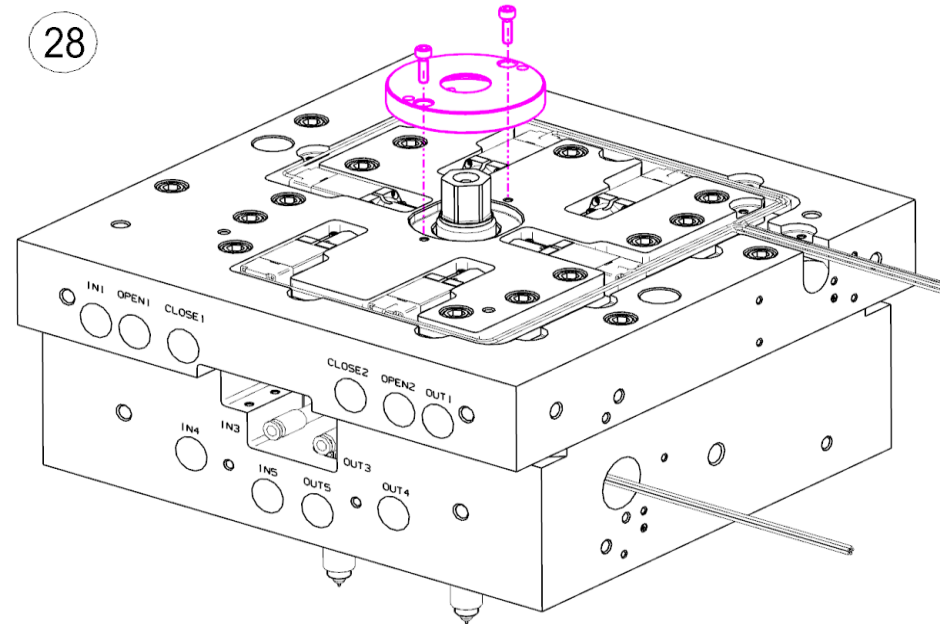 

29

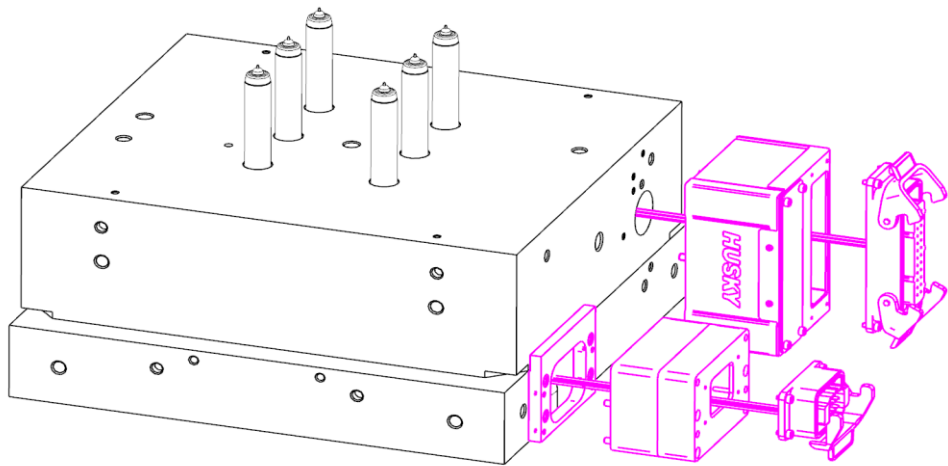 

30

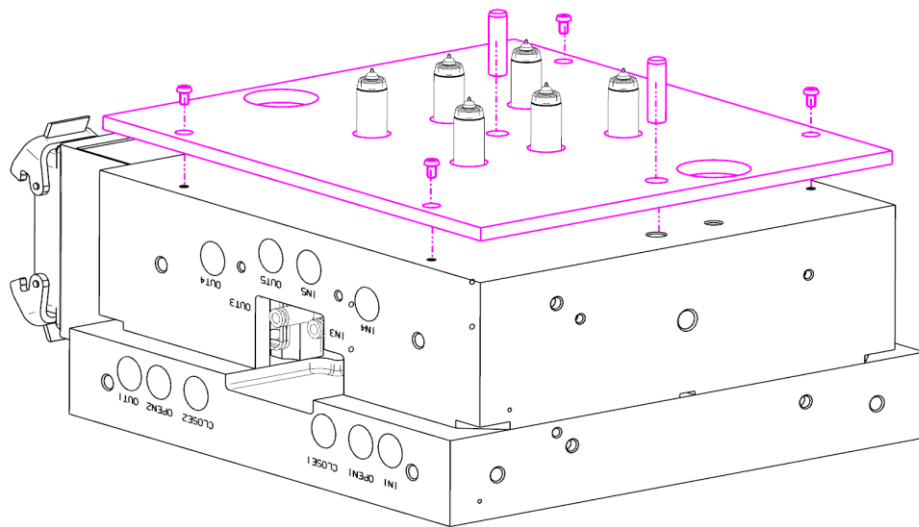 

31

